





Operating Instructions (SKU#01181072 PUMPKIN NESTER)

- Carefully remove all of the parts from the package including: 1 seat with legs, ropes and top hanger, 1 body, 1 pumpkin head, 1 AC/DC adapter in small box that also includes the screws and 1 plastic wedge.
- Hang the item from something stable enough to support the weight. Adjust the ropes to make the seat level, as diagram A shown.
- Secure the body to the seat with the screws provided as shown in diagram B, using the screw/plastic wedge and screw nut / screw respectively.
- Connect and "click" the head into place as shown in diagram C. Be sure to connect gently until it is secure.
- Once the item is placed in the area to be displayed, adjust the clothing until desired look is achieved, as shown in diagram D.
- Connect the AC/DC adapter to the cord that comes out from the back of the product. Once connected, insert the AC/DC adapter to the appropriate input.
- This product has a sound sensor to activate it. Clap your hands loudly to activate the audio and motion of this item.
- When storing this product, carefully remove the product from wherever it has been placed to avoid any undue strain or stress on the product.
- When not in use, store neatly in a dry, cool location protected from sunlight.

MADE IN CHINA

