 
 


Operating Instructions (SKU#01030014 BOXED IN)

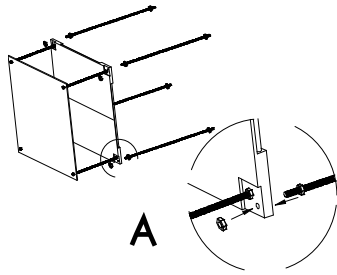


1. Carefully remove all of the parts from the package including: 1 cubed shaped frame for the top of the box, 1 flat square shaped frame for the bottom of the box, 4 metal rods with one nut on each end, 1 small poly bag containing 8 nuts, 1 large poly bag containing fabric cover, 1 AC/DC adapter.

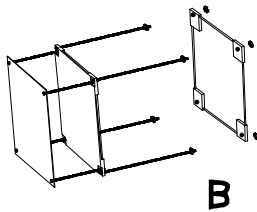


2. Using the nuts to screw the 4 metal rods to the cubed shaped frame, make sure the nuts and the top end of the rods are in the same level. See diagram A.

3. Using the nuts to screw the flat square shape frame (bottom) to the 4 metal rods. Make sure the nuts and the ends of the 4 metal rods are aligned. See diagram B.

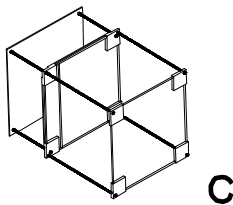

4. Double check all of the nuts to be sure they are all tightly secured. See diagram C.

5. Slide the fabric cover over the frame, from the bottom to the top as shown in diagram D. Make sure the opening on the front panel of the fabric is aligned so the face will be visible when together.

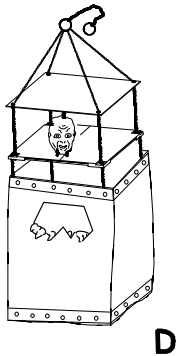


6. Secure all of the Velcro strips together. The item is now ready to hang from something stable enough to support the weight, or to be placed on the floor to serve it's function.

7. Connect the AC/DC adapter to the cord that comes out from the top of the box. Once connected, insert the AC/DC adapter to the appropriate input.

8. This product has a sound sensor to activate it. Clap you hangs loudly to activate the sounds and movement.

9. When storing this product, carefully remove it from wherever it is placed to avoid any undue strain or stress on the product.

10. When not in use, store neatly in a cool, dry location protected from sunlight.

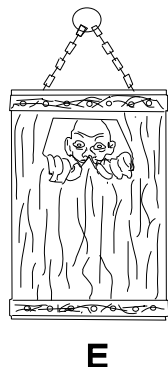

MADE IN CHINA

